


A.C. COMPRESSOR MOUNT 118R

**Big Block Chevy - Short Water Pump
Passenger Side - Wide Mount**

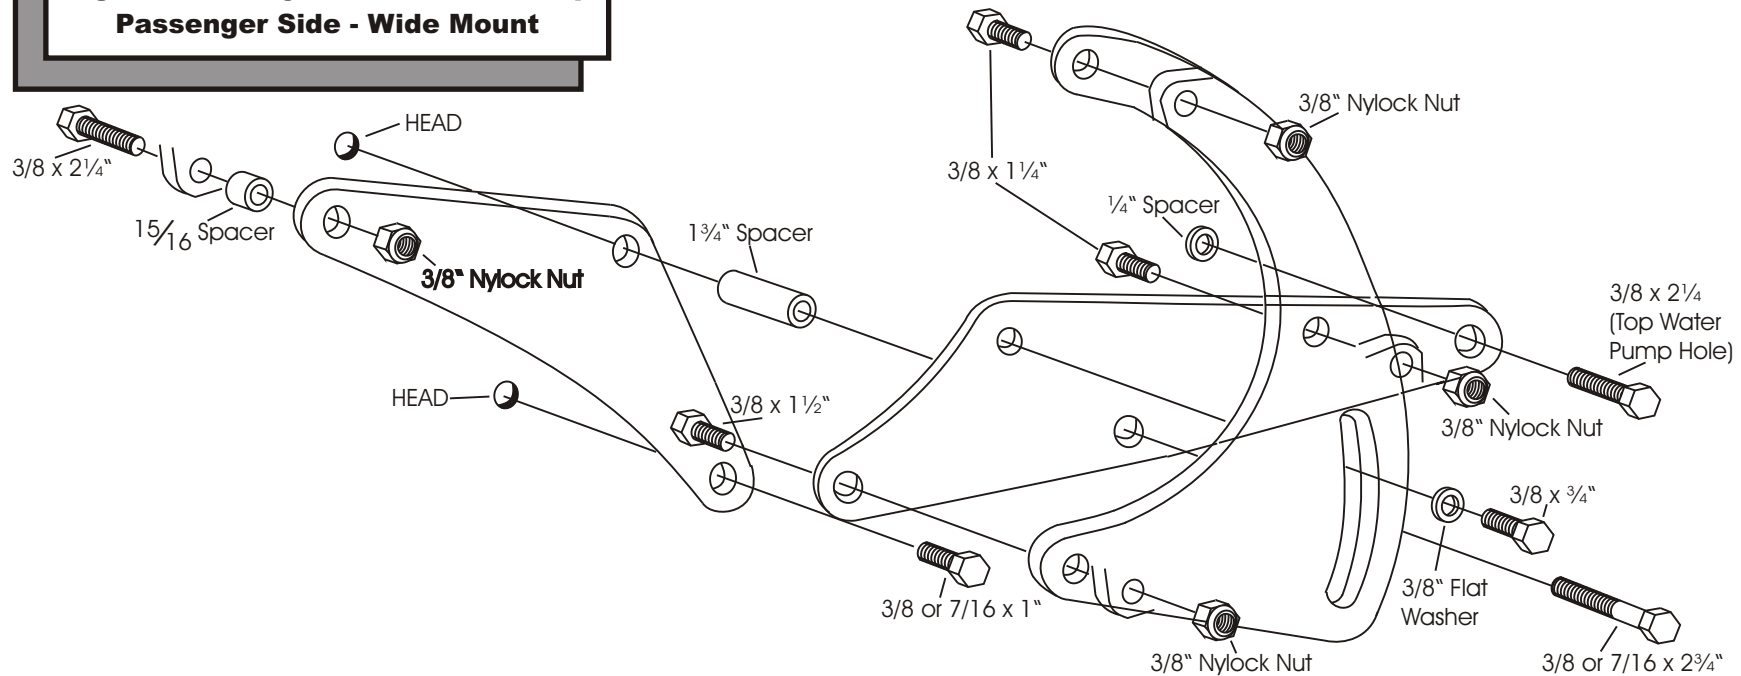

NOTE: Some heads have 3/8" bolt holes and some have 7/16". This kit includes both sizes of bolts for these holes.

If your head has 7/16" it will be necessary to enlarge the corresponding holes in the mount to 7/16".

When installing the mount, start all bolts and mount the compressor before tightening.

(We use a belt length of 61-62" with this mount on installations in our shop. However; this can vary with the diameter of your pulleys.)

As with any part of this nature, make sure it fits your application before painting or plating.

A.C.
COMPRESSOR
MOUNT
118R

**Big Block Chevy - Short Water Pump
Passenger Side - Wide Mount**

**ALAN GROVE COMPONENTS, INC.
27070 METCALF ROAD
LOUISBURG, KS 66053**