


A.C. COMPRESSOR MOUNT 132R

Small Block Chevy - Short Water Pump
Passenger Side



We use a belt length of 58½ - 59½" with this mount on installations in our shop. However; this can vary with the diameter of your pulleys.

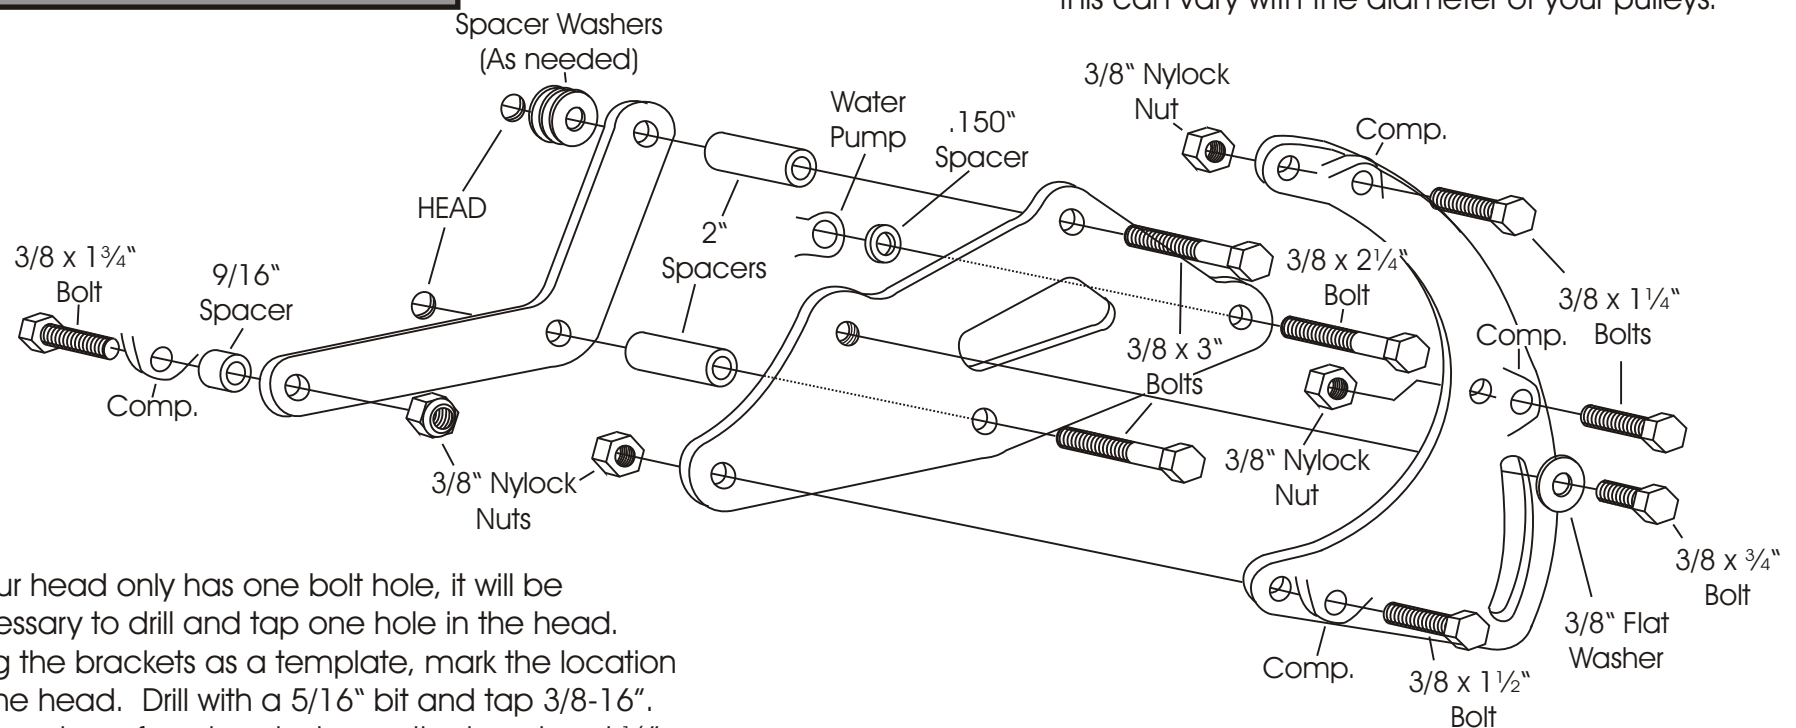

If your head only has one bolt hole, it will be necessary to drill and tap one hole in the head. Using the brackets as a template, mark the location on the head. Drill with a 5/16" bit and tap 3/8-16". The number of washers between the head and 1/4" spacer will vary with different castings. As with any mount system, assemble all of the brackets to engine BEFORE TIGHTENING THE BOLTS.

As with any part of this nature, make sure it fits your application before painting or plating. Parts that have been painted, plated, or modified may not be returned.

A.C.
COMPRESSOR
MOUNT
132R

Small Block Chevy - Short Water Pump
Passenger Side

ALAN GROVE COMPONENTS, INC.
27070 METCALF ROAD
LOUISBURG, KS 66053