


# 309 ALT.

Alternator Mount  
Short W.P. Serpentine  
Small Block Chevy



**NOTE:** When installing the mount, start all bolts and mount the alternator before tightening.

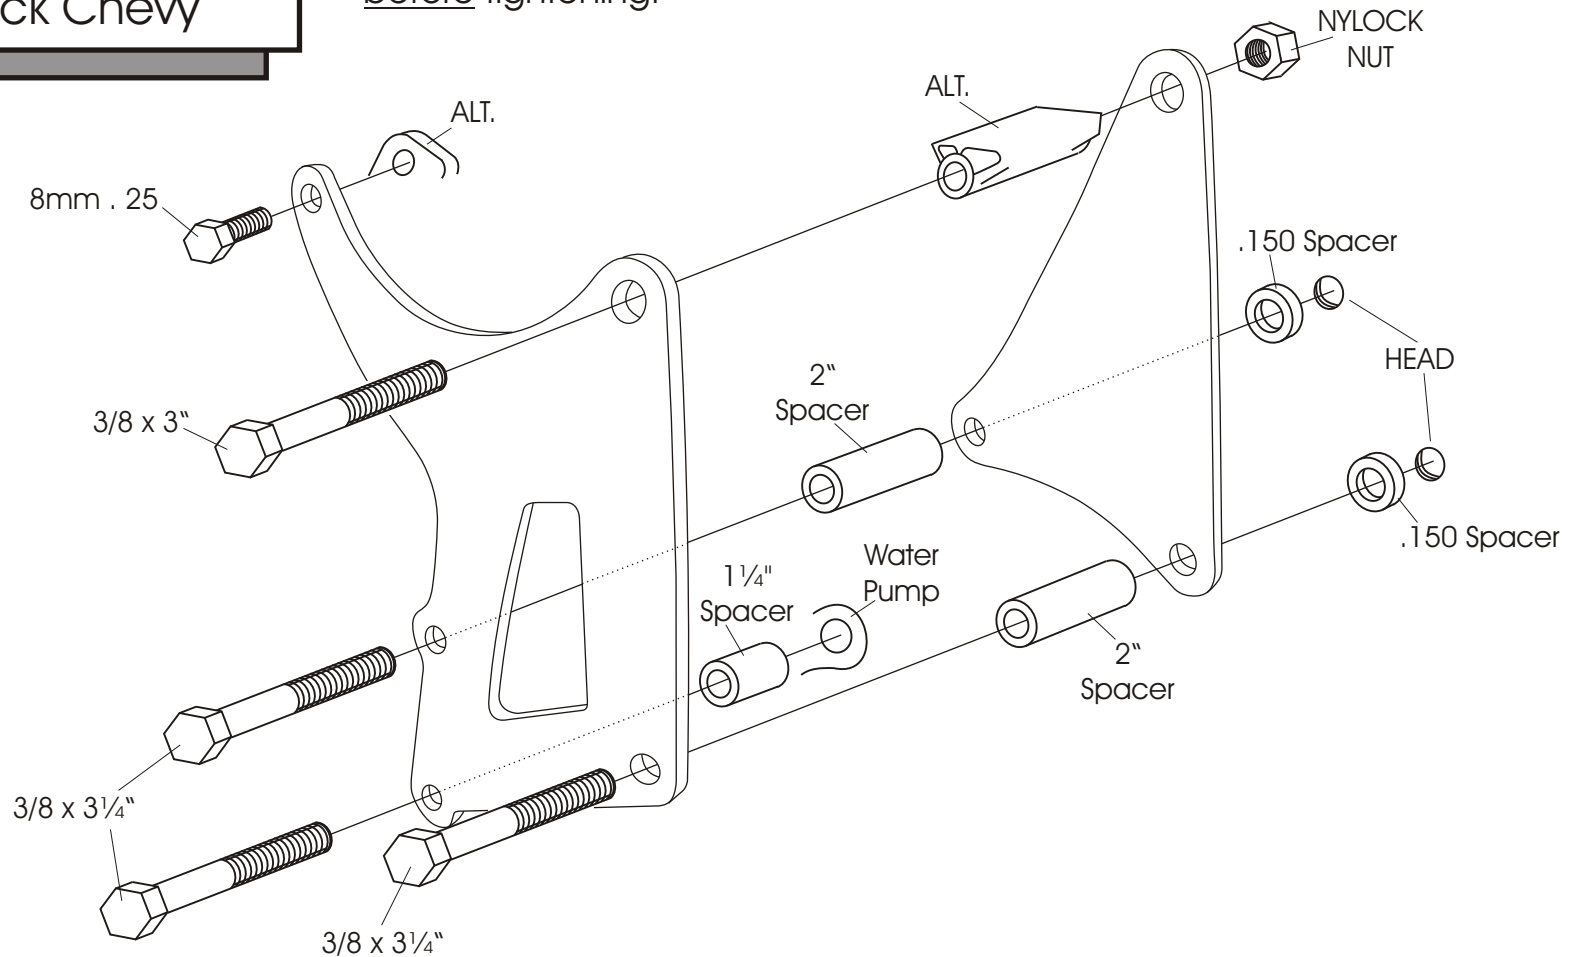

**As with any part of this nature, make sure it fits your application before painting or plating. Parts that have been painted, plated, or modified may not be returned.**

309 ALT.

Alternator Mount  
Short W.P. Serpentine  
Small Block Chevy

**ALAN GROVE COMPONENTS, INC.**  
**27070 METCALF ROAD**  
**LOUISBURG, KS 66053**